

Integration Control Module® (ICM) Kit [002-1593-XX]

Components:
ICM..... 1

Special Tools:
T10 Torx head screwdriver

Language of origin: English

Note
Record handpiece program settings, so all can be reprogrammed after installation.

Step 1: Remove ICM.



WARNING

Always disconnect power from the chair before removing any covers. Failure to do so may result in personal injury.

- A) Turn the Master Switch OFF and remove handpieces from the holders.
- B) Remove lid.
- C) Remove eight screws from the bottom cover attaching the top cover.

Note: Keep all screws from top cover and display assembly for future use.

- D) Position top cover for clear access to ICM.
- E) Label wiring then disconnect wiring from the ICM.




Equipment Alert

Do not damage the E-field sensors and other components.

- F) Remove two Torx screws attaching ICM bottom then remove remaining six screws.
- G) Remove ICM.

Step 2: Install ICM.



- A) Insert the new ICM into the top cover then insert the ICM bottom and secure.
- B) Connect wiring to ICM.
- C) Install new ICM to top cover.
- D) Align top cover to bottom cover and install using the eight previously removed screws.
- E) Install lid.
- F) Connect the power to the chair and turn the Master Switch ON.
- G) Place all handpieces into holders and test to verify functionality (refer to troubleshooting).

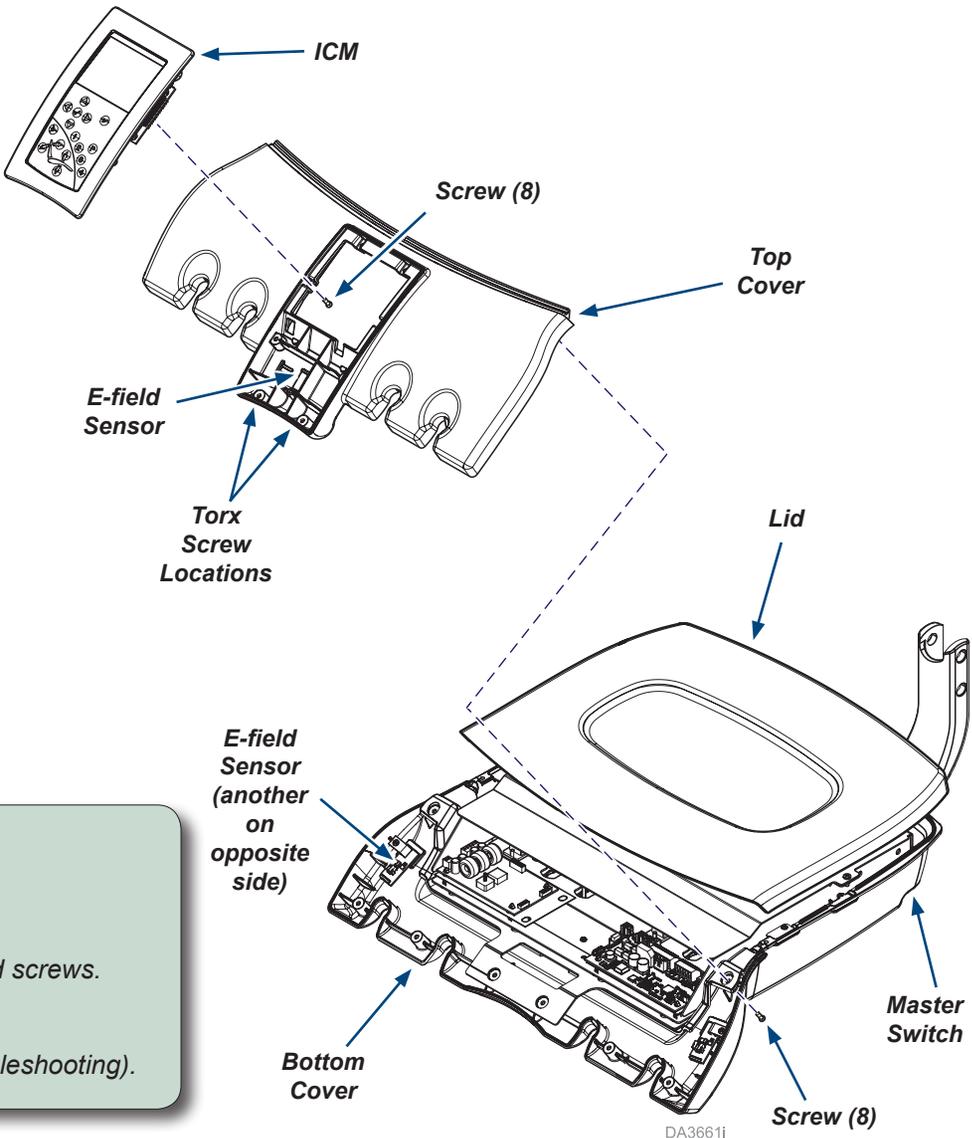

TP200 Rev. A

Step 3: Assign each handpiece to a holder position.


- A) Assign handpieces to proper holder positions and reprogram each handpiece and user preferences (refer to troubleshooting).
- B) Test handpieces and delivery system to verify functionality.

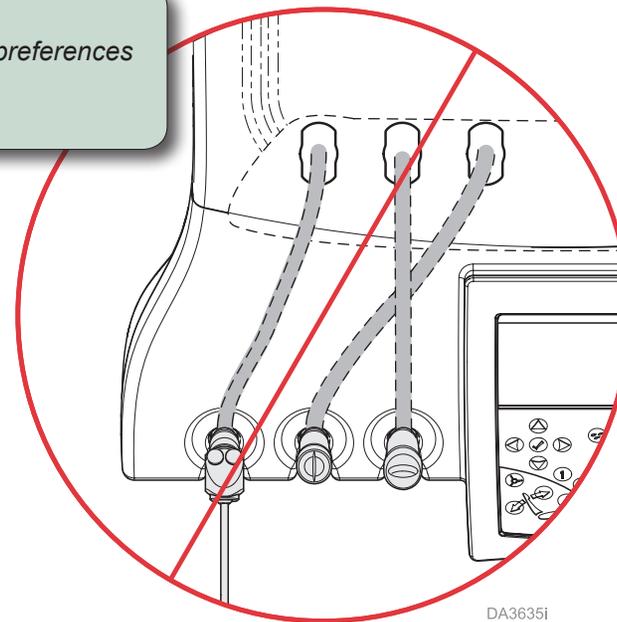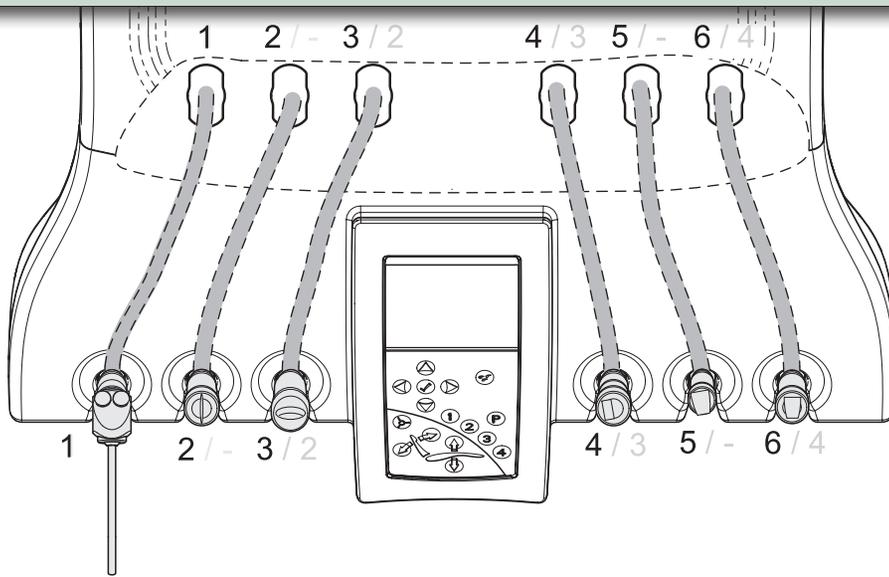

Equipment Alert

When properly positioned, handpiece tubing will always drape straight down from the delivery unit to the holder position without crossing over other tubing.

Configuration/ Handpiece Assignment

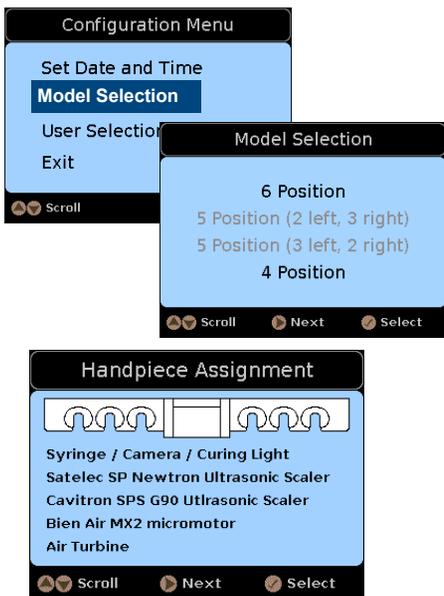

Press + to access the Configuration Menu.

Use to highlight 6 or 4 position model and to select it.

The Handpiece Assignment Screen for that model appears:

Press to advance through available holder positions. The holder position highlights as the handpiece name assigned to that position highlights in the list.

To assign a handpiece type to a holder position:

Press to advance highlight to the desired holder position.

Press to highlight the handpiece name you want to assign, then press to assign it to highlighted holder position.

Continue to press to advance through remaining holder positions, invoke the System Configuration Saved screen and to exit to the Home screen.

Note

The Powered option is not used.

