
Central Scavenger Waste Anesthetic Gas Disposal System Installation

<u>Applies to Models:</u> 40162800

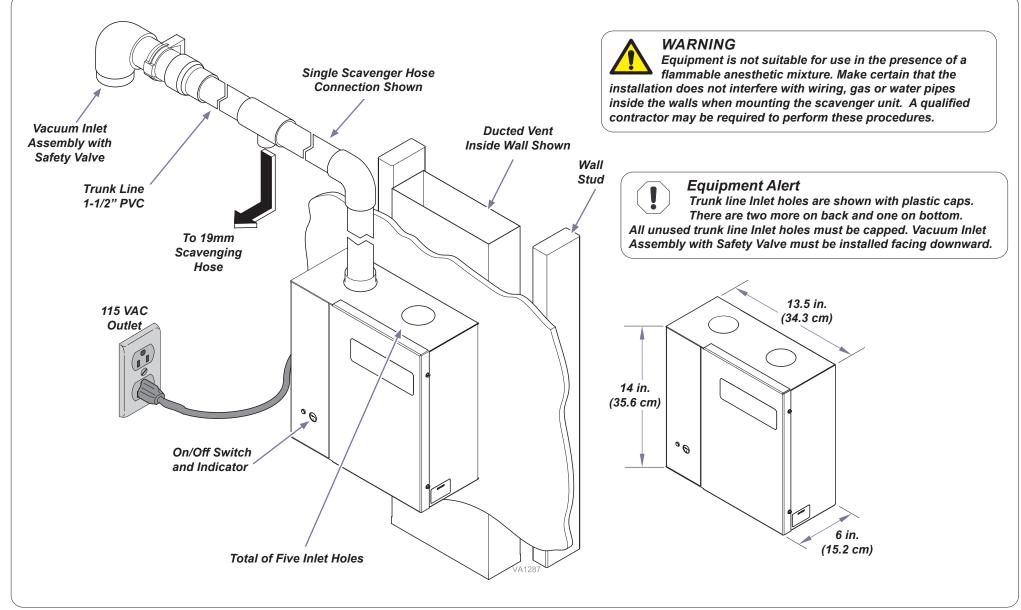

Important Information

Intended Use

Operation of all Midmark Waste Anesthetic Gas Disposal equipment is restricted to use in veterinary procedures.

Disposal of Equipment

At the end of product life, the unit(s), accessories, and other consumable goods may become contaminated from normal use. Consult local codes and ordinances for proper disposal of equipment, and other consumable goods.

Transportation / Storage Conditions

Ambient Temperature Range:	32°F to 104°F (0°C to 40°C)
Relative Humidity	10% to 90% (non condensing)
Atmospheric Pressure	500hPa to 1060hPa (0.49atm to 1.05atm)

Symbols

These symbols may appear on your equipment and/or in the manuals.



Proper Shipping Orientation



Maximum stacking height (Do not stack)



Fragile





Consult User Guide



Do Not Tumble



Handle With Care

Safety Symbols



WARNING

Indicates a potentially hazardous situation which could result in serious injury if not avoided.



Caution

Indicates a potentially hazardous situation which may result in minor or moderate injury if not avoided. It may also be used to alert against unsafe practices



Equipment Alert

Indicates a potentially hazardous situation which could result in equipment damage if not avoided.

Note

Amplifies a procedure, practice, or condition.

Central Scavenger Site Requirements

	Trunk Line	
	Туре	PVC Sch 40 Pipe
	Size	1-1/2" (Installer Supplied)
	Termination	Vacuum Inlet Assembly with Room Air Safety Valve Facing Downwards (included)
	Scavenger Connection	Secure PVC Pipe to Inlet Hole with O-ring and Lock Nut (included)
Plumbing	Maximum Length	100' Pipe, 8 Elbows
	Max Trunk Lines	3 Trunk Lines for Each Central Scavenger Unit with up to 4 Scavenging Hose Connections (Note: Only 3 Scavenging Hose Connections in Canada) (40' Scavenging Hose included)
	Mounting Options	PVC can be mounted to Wall or Ceiling (can be concealed inside wall or above ceiling)
Vent	Туре	Direct or Ducted
	Size	Maximum length for 3-1/4 x 10in. ducting is 40 feet with no more than one 90° bend. Maximum length for 5 in. diameter round ducting is 30 feet with no more than one 90° bend.
	Template	Paper Template Provided
	Boxes	
	Supply	115 VAC Outlet
Electrical	Power Cord Length	6'
Temperature		
Environmental	Equipment Room Ambient Temperature	32° to 104° F 0° to 40° C


Installation Kit Components

Installation Preparation...

Choose a location to install the Scavenger Unit within 6 feet of a 115 VAC outlet.

Note: Use the Cutout Template provided in the Installation Kit to mark the appropriate cutouts for the required installation configuration (Direct Wall or Ducted Vent) and optional rear Trunk Inlet Line holes.

Cutout Template (1)

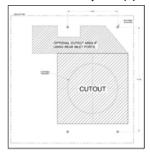

1-1/2" x 1 1/2" x 3/4" NPT RDC Tee (4)



Auto-close 19 mm Hose Fitting (4)



Male Adapter 1-1/2 in. PVC (1)




Lock Nut Conduit 1-1/2 in. (1)



Street Elbow Vacuum Inlet PVC 1-1/2 in. (4) Assembly (1)



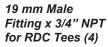



O-Ring (1)

Flanged Lock Nut (2)








Includes Room Air

Safety Valve




VA1288

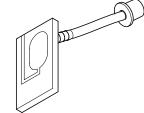

19mm Adapter (4)



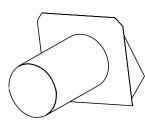

Manometer with Tubing and 1/4" Adapter (1)



6 Foot Electrical

Power Cord (1)




40 Ft. of 19mm Magenta Scavenging

Hose

19mm Female Fitting x 3/4" NPT (4)

4

Central Scavenger Unit

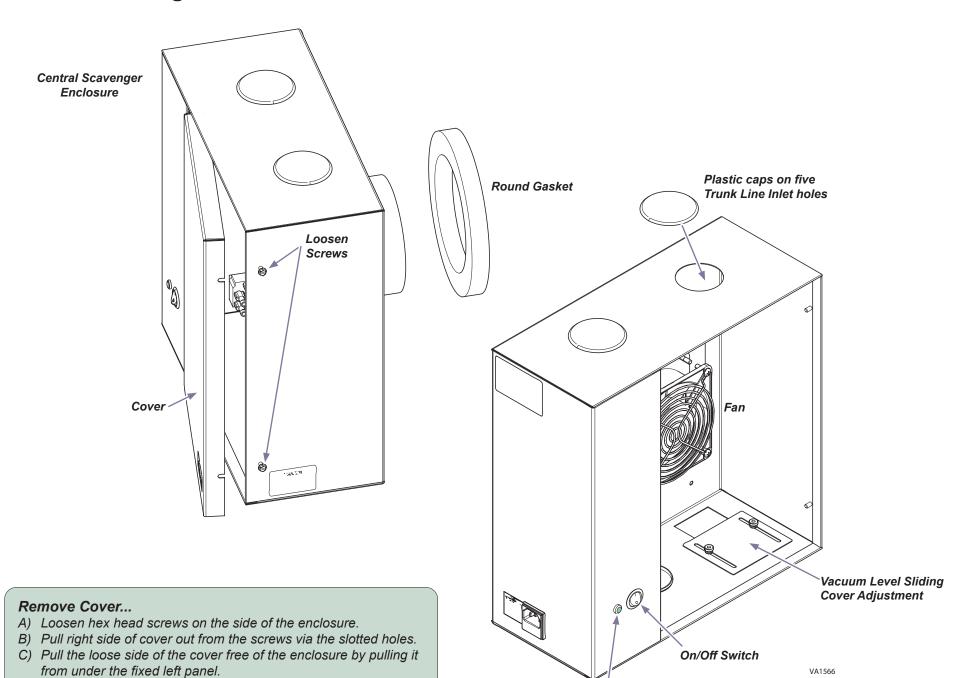

5

10593000

On LED Indicator (green)


Vent Installation

Install direct wall or ducted vent.

Note: Use the paper template provided to properly locate the anchor and vent holes on the wall surface before drilling and mounting the unit to the wall.

Direct Wall Vent Installation

Mount the scavenger unit to the wall.

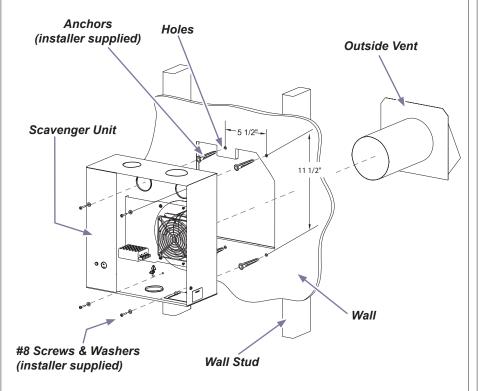

Mount the vent to an outside wall and weatherproof as necessary.


Trim vent duct length to keep vent flush with outside wall.

Ducted Vent Installation

Use 3-1/4 x 10 in. rectangular duct installed thru an interior wall to vent scavenger unit to the roof or an outside wall.

- A) Secure scavenger unit to wall anchors.
- B) Press scavenger unit thru wall and into duct.
- C) Use four #8 screws and flat washers to draw together.

Note: Round, 5 in. diameter ducting could also be used to vent the scavenging unit thru the wall.

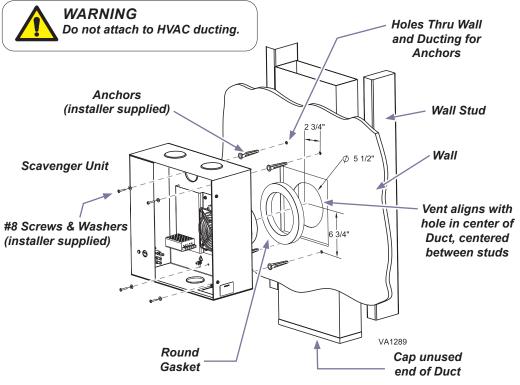

Mount the vent to an outside wall and weatherproof as necessary.

Trim vent duct length to keep vent flush with an outside wall.

6

Use a vent designed for roof applications if the vent terminates on a roof.

Install trunk line in ceiling or wall (wall shown on next page).

WARNING

Adapter

19mm

Always unplug or disconnect the appliance from the power supply source before servicing. To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device. To reduce the risk of fire, electric shock or injury to persons, do not use replacement parts that have not been recommended by the manufacturer (e.g. parts made at home using a 3D printer).

Caution

For general ventilating use only. Do not use to exhaust hazardous or explosive materials and vapors.




WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS, OBSERVE THE FOLLOWING: A) Use this unit only in the manner intended by the manufacturer. If you have questions, contact the manu-

B) Before servicing or cleaning unit, switch power off at service panel and lock the service disconnecting means to prevent power from being switched on accidentally. When the service disconnecting means cannot be locked, securely fasten a prominent warning device, such as a tag, to the service panel.

C) Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction. D) Sufficient air is needed for proper combustion and exhausting of gases through the flue (chimney) of fuel burning equipment to prevent back drafting. Follow the heating equipment manufacturer's guideline and safety standards such as those published by the National Fire Protection Association (NFPA), and the American Society for Heating, Refrigeration and Air Conditioning Engineers (ASHRAE), and the local code authorities. E) When cutting or drilling into wall or ceiling, do not


damage electrical wiring and other hidden utilities. F) Ducted fans used to exhaust contaminants must always be vented to the outdoors.

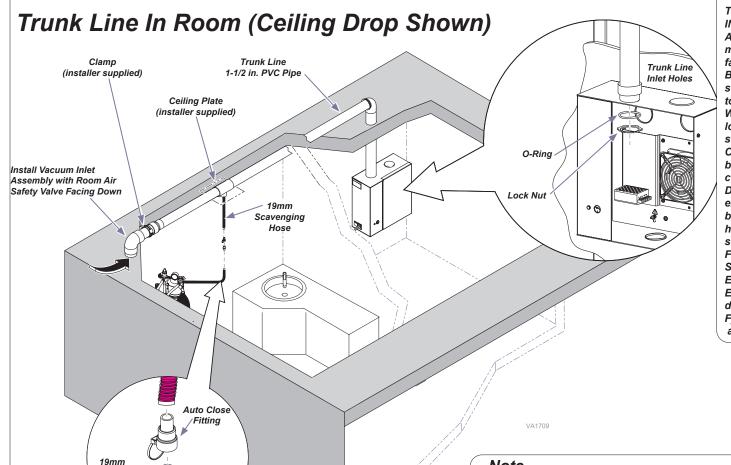


Note

7

Example shows equipment room and one operatory set-up. Scavenger is shipped with components for four scavenging hose connections.

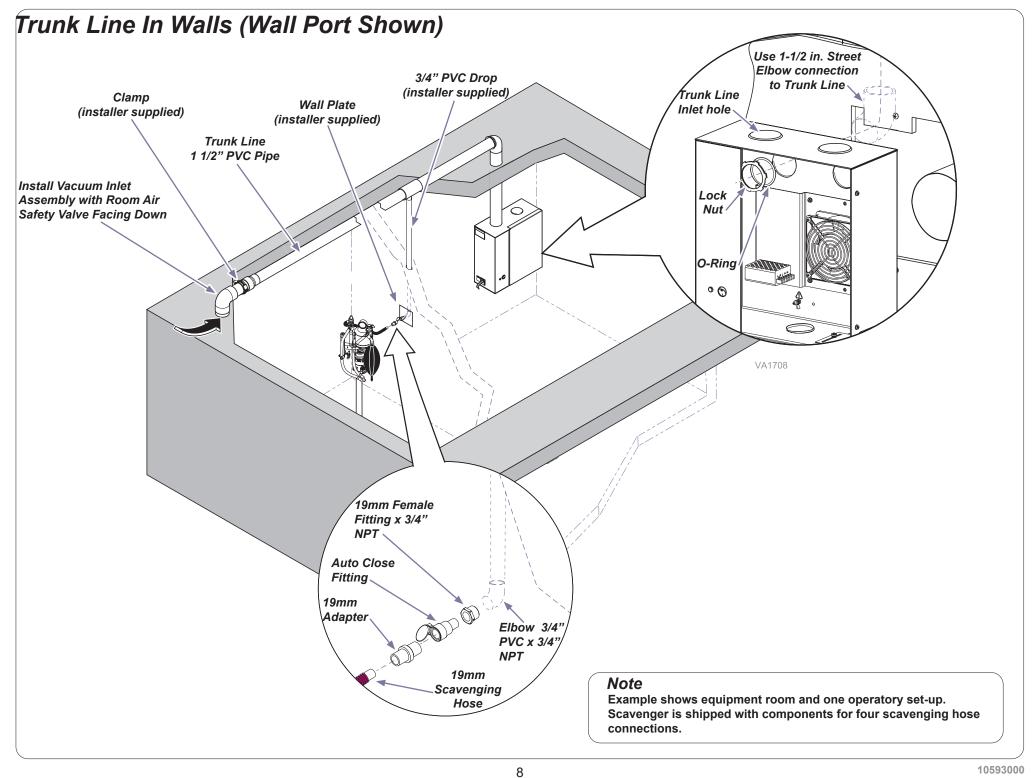

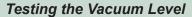

The maximum allowable negative pressure in the central scavenger system, immediately downstream of the gas collecting assembly during normal administration of anesthesia, shall be tested at an excess gas flow rate of zero and shall be 50 Pa $(0.5 \text{ cm-H}_2\text{O})$ or less.

Follow the instructions printed on the front of the manometer to test the vacuum level at every scavenging hose throughout the entire central scavenger system. Repeat test with all scavenging hose connections open.





Pass = Between Lines = Proper Vacuum (1 Atm To -0.5cm HO)

Directions for use:

- 1. Mix 1 drop of liquid dish soap with one cup of water.
- 2. Pour mixture to Fill Line in manometer.
- 3. Attach scavenger to scavenger hose.
- 4. Activate scavenger unit.
 Water level should remain in the PASS zone between the lines during the test.

62991000 Rev C

VA1825i

Use 1/4 in. Tubing with Adapter to Connect Manometer to 19mm Scavenger Hose

9

10593000

VA1300

19mm Scavenging Hose

Auto Close Fitting

19 mm Adapter