

If worksurface will not hold position...

- A) Loosen serrated nut.
- B) Turn cylinder nut clockwise.
- C) Tighten serrated nut.

If brake does not release to allow height adjustment...

- A) Loosen serrated nut.
- B) Turn cylinder nut counter-clockwise.
- C) Tighten serrated nut.

