Canis Major® Exam Lift Table Setup Guide

Applies to Models:
CMWO (without scale)
CMWS (with scale)

Step 7: *Raise and lower table top*

Note: Operating range should be 34" (86.4 cm). (9.5" to 43.5" (24.1 to 110.5 cm) from floor)

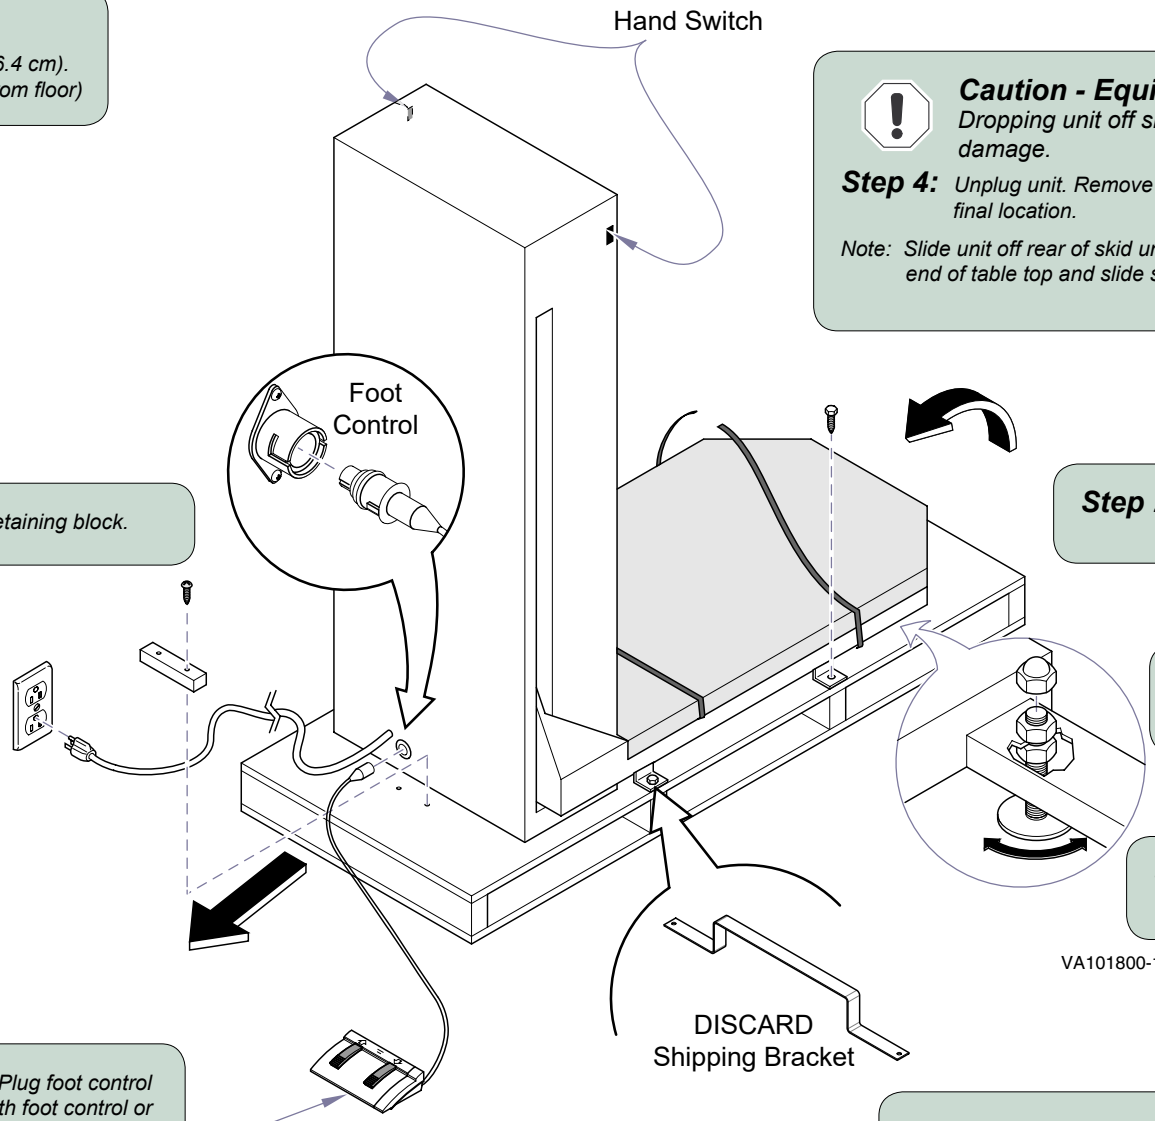

Caution - Equipment Alert
Dropping unit off skid could result in equipment damage.

Step 4: *Unplug unit. Remove table from skid. Move to final location.*

Note: Slide unit off rear of skid until legs are almost off, then lift front end of table top and slide skid clear of legs.

Step 1: *Unfasten and remove rear retaining block.*

Step 2: *Remove [2] packaging straps and any remaining packaging material.*

Step 5: *Adjust front leveling feet as necessary to stabilize unit.*

Step 8: *Wipe down entire table using mild cleaner solution.*

VA101800-1i

Step 6: *Plug unit into power source. Plug foot control into table. Raise table top with foot control or hand switch.*

Note: A dedicated supply circuit is required for this table and needs to be 115 VAC, 60 Hz, 10 Amp.

Note: Plug unit into power source. 115 VAC, 60 Hz, 10 Amp.

Step 3: *Lift table using hand switch, remove shipping brackets and DISCARD [2] . Brackets used for shipping purposes only.*

© 2017 Midmark Corp. | 60 Vista Drive Versailles, OH 45380 USA | 1.800.643.6275 | 1.937.526.3662 | www.midmark.com

TP200 20-42-FO-00012 Rev A1 C2169 Style A

003-1728-00 Rev. DA2 3/9/21