Install Guide
Midmark 630 HumanFORM® Procedure Chair

Applies to Models:
630 (-010 thru -013)
630 (-020 trhu -023)

Language of origin: English

To install headrest assembly...
A) Loosen headrest adjustment knob.
B) Insert mounting stud into headrest fixture.
C) Position headrest as desired.
D) Tighten headrest adjustment knob.

Optional Headrest Styles

(Note: Installation is the same)

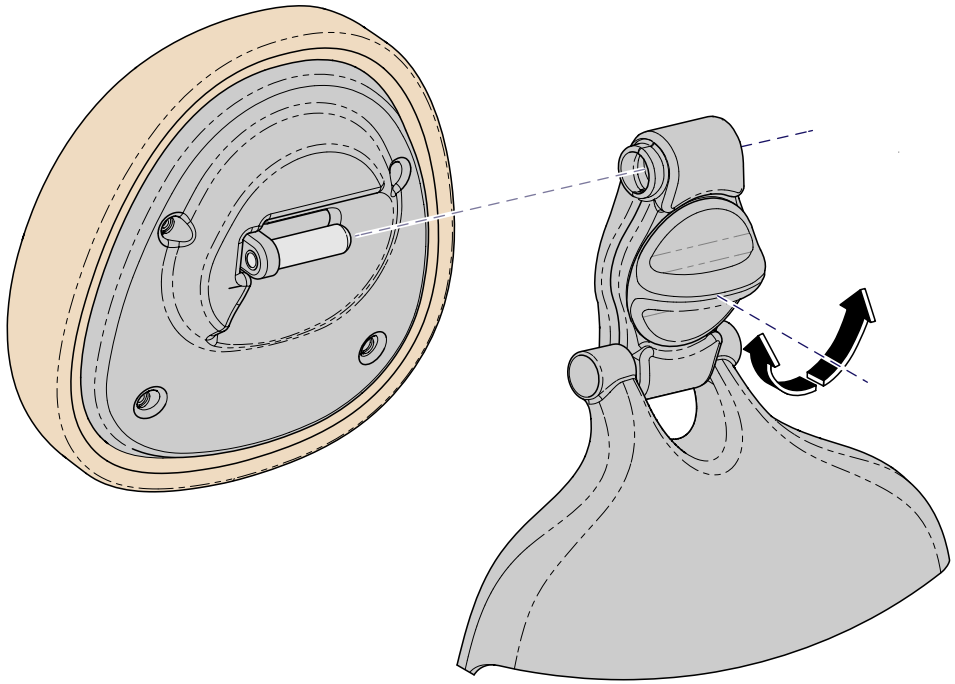

TP200 Rev. A

© 2013 Midmark Corp. | 60 Vista Drive Versailles, OH 45380 USA | 1.800.643.6275 | 1.937.526.3662 | midmark.com

Style A

003-2668-00 Rev. AA3 8/10/22