



CABINETS DESIGNED FOR DENTISTRY

Simplify safety and receive a lifetime of use with the aseptic surfaces and durable construction of Midmark Synthesis Cabinetry. With its unique steel structure and ergonomic design, it's an investment you can feel good about.

STYLING OPTIONS FOR YOUR BRAND

Providing innovative design for the dental environment, complete with modern finishes, Synthesis Cabinetry offers a blend of functionality with sophistication.



Panels: Serenity, Transcend, Pinnacle, Renew and Cove



Pulls: Arc, Edge, Flare, Bent and Bent Antimicrobial

01 ENDURING QUALITY

Built to deliver a like-new appearance over its lifetime, Synthesis Cabinetry is covered with a durable vinyl finish exterior, providing scratch-resistant and stain-resistant surfaces that generic or local cabinetry can't duplicate.

02 BUILT TO LAST

Behind the beautiful wood-cabinet appearance is a strong steel frame that provides a durable mounting foundation for full extension drawer glides and door hinges—a foundation that maintains its integrity over years of use.

03 ASEPTIC DESIGN

From the inside out, Synthesis Cabinetry is designed to support asepsis. The steel frame is sealed with electrostatic powder-coat paint to prevent damage from moisture. Seamless, polystyrene drawers contain spills and are easy to clean. Seamless, vinyl-covered panels resist spilled fluids and chemicals and can be cleaned without surface degradation.

SYNTHESIS® CABINETRY COLLECTION

TECHNICAL SPECIFICATIONS




Structure: Powder-coated, 18-gauge cold rolled steel; multi-piece shell and frame design; riveted



Door and drawer front/back: 12-mm seamless polymer-covered front; melamine back (Frost color)



Door and drawer core: 45 lb LEED® IEQ-compliant MDF board, 3/4" thick (all composite wood material to meet CARB P2 emission standard of CARB regulation 91320.4)

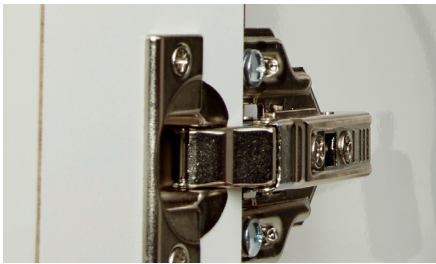

Hinges: Manufacturer's standard Blum® hinges; concealed, soft-close, 110° opening, nickel-plated metal, clip-on mount, three adjustment points



Pulls: 128-mm pull offerings (Serenity, Transcend and Pinnacle style); integrated front-pull design (Cove style); recessed clear snap-on pull with interchangeable color strips (Renew style)



Deep-drawer construction: One-piece, molded polystyrene drawer bodies with rounded corners (Frost color)



Slide: Accuride® full extension, soft-close slides (100-lb capacity); Accuride model 3832 (100-lb capacity) for pullout writing surfaces and waste cans



Locks: Lockless, keyed or keyless lock options