



ANIMAL HEALTH

Synthesis[®] Cabinetry



Choose storage designed for veterinary care

DURABLE

- Materials designed for veterinary care withstand prolonged use in wet environments.
- Materials support infection control protocols without deteriorating.
- Meticulous construction extends the life of your investment.

FLEXIBLE

- Modular cabinetry can be easily reconfigured or expanded to support practice growth.
- 3D renderings reveal your future space to ensure you have what you need to support care delivery.

FUNCTIONAL

- Supplies are ergonomically positioned to enhance clinical workflow.
- Soft-close latches and drawer pulls support a quieter patient experience.
- Seamless drawers and door fronts prevent liquids from seeping into crevices.

STYLISH

- Extensive selection of finishes, countertops and drawer pulls enhance your dream design.
- Attractive, veterinary-friendly materials are renewable, affordable and easy to maintain.



Create a care space that supports better function + flow



When designing your space, consider the different elements that impact staff efficiency in day-to-day care delivery. Cabinetry is more than a place to store supplies—it's foundational to how you work in your space.

Start your design journey by exploring cabinetry designed for animal care: Synthesis® Cabinetry withstands the rigors of veterinary environments, combining style, durability and veterinary-friendly features that make it one of the easiest decisions you'll make.



Leverage clinical design expertise



Whether you are looking to integrate new technologies, improve workflow, or better utilize space, our clinical design experts can help. Together, let's turn your dreams into reality by creating efficient care areas throughout your facility.



TREATMENT AREA



SURGERY SUITE



PHARMACY



DENTAL SUITE



INSTRUMENT PROCESSING



LAB

Design
your
space
for the
people
who
use it



**92% OF VETERINARY TECHNICIANS IN THE US ARE WOMEN¹,
WITH AN AVERAGE HEIGHT OF 5' 4" TALL².**

Synthesis® Wall-Hung Cabinetry positions supplies at the right height for women, eliminating the strain of accessing out-of-reach items. Instead of forcing staff to adapt, create a workspace designed specifically for them.



- 01** At-a-glance view of supplies for access or restocking
- 02** More access to available storage without having to lean
- 03** Reduce the need to bend when accessing lower items

NOTE: The model shown here falls within the 50th percentile female height.



1. Data USA, "Veterinary Technician & Veterinary Assistant.", <https://datausa.io/profile/cip/veterinary-technician-veterinary-assistant>
2. National Center for Health Statistics, "Anthropometric reference data for children and adults: United States, 2015-2018." January 2021, https://www.cdc.gov/nchs/data/series/sr_03/sr03-046-508.pdf

Organize supplies for better access

The right storage accessories can help organize supplies. Angled flow-shelving provides better visibility and accessibility, even for items stored at the back of the cabinet. Stackable bins keep your most-used items within easy reach.



Durable design to stand the test of time

01 STEEL-ON-STEEL CONSTRUCTION

Steel-on-steel design produces more durable cabinetry. Slide attachments and slides (A) are stronger than typical millwork drawers. Nutsert® rivet nuts strengthen door attachment points (B), eliminating hardware-to-substrate connection failures that occur in traditional steel-to-wood cabinetry.

02 SEAMLESS DOORS + DRAWERS



¾" LEED® IEQ compliant MDF board sealed with a thermofoil and melamine backing resists moisture, decreasing expansion or shrinking.

03 TOE KICK

A 4.25" tall toe kick allows physician seating to roll underneath cabinet doors and drawers while preventing damage to the cabinetry.



[Learn more about the advantages of Synthesis® Cabinetry vs. local millwork.](#)

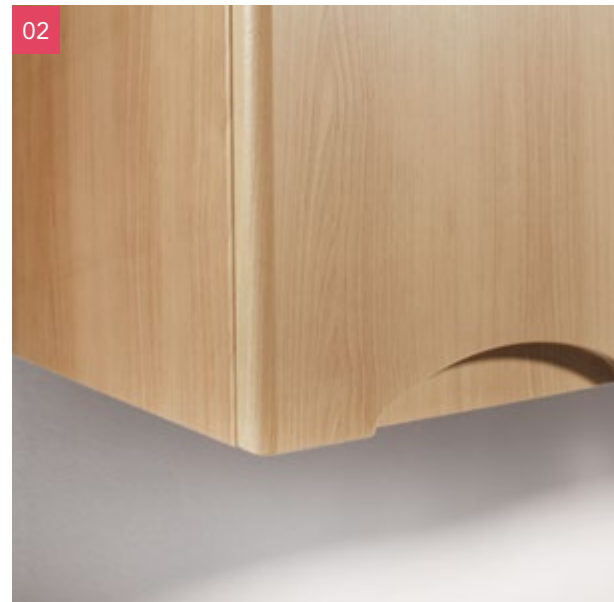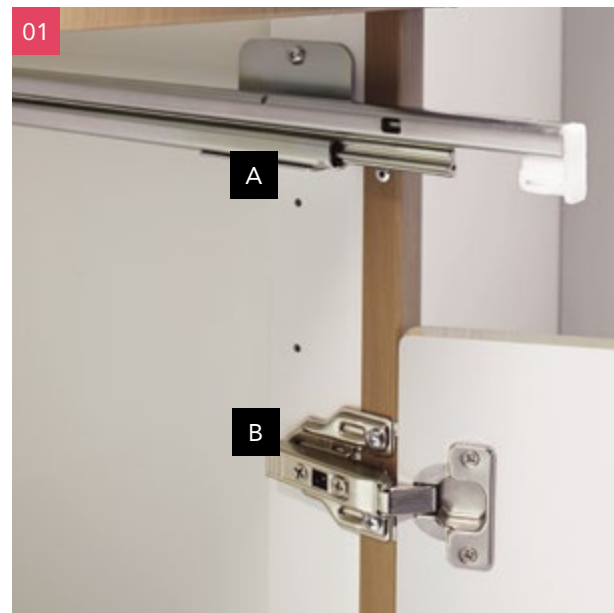

CONFIGURE YOUR SPACE TO SUPPORT FUTURE NEEDS

Synthesis Cabinetry is designed for flexibility, allowing you to configure (and reconfigure) elements to create a space that supports your team, regardless of how often your needs change.



These images show just a few examples of how Synthesis Cabinetry can be reconfigured to accommodate the changing needs of your facility.

Simplify cleaning + disinfecting

Room cleaning and turnover are easier when staff have wall-to-wall access for disinfection. Synthesis Wall-Hung Cabinetry opens floor space, helping staff maintain a safe, aseptic environment for patients.



ANTIMICROBIAL PULLS + COUNTERTOPS

EPA-registered, antimicrobial pulls and biocidal surfaces can complement infection prevention measures.

EPA registration numbers 85353-2 for pulls and 84542-7 for surfaces.



COVERED GLIDES

The aseptic, sealed drawer glide design helps simplify cleaning, disinfection and maintenance.



SEAMLESS THERMOFOIL PANELS

Seamless panels are designed to resist spills, chemical degradation and delamination.



SEAMLESS POLYSTYRENE DRAWERS

Rounded corners and one-piece construction help contain spills and can be easily cleaned.

Explore planning + design resources

We can help make the planning and design of your space easier with helpful architectural resources all in one place. You and your architectural and design team will find Revit files, technical drawings, approval numbers, dimensions, guidelines and more. Visit our Design Center at: midmark.com/design-center



Designing a healthy environment together

Our unique product attributes have been designed to assist you in obtaining credits within the LEED® family of rating systems. We choose to be proactive because we know that LEED contributes to healthy environments through improved air quality and we want to be your partner in the facilitation of a better working environment. Midmark cabinetry can contribute to specifier strategies and LEED credits that can impact building certification including water efficiency, construction waste management, material reuse, recycled content, local/regional materials and low-emitting materials. Please see the comprehensive list of credits below.

LEED Credits

BUILDING DESIGN + CONSTRUCTION: NEW CONSTRUCTION V4, V4.1

	LEED POINTS		LEED POINTS
WE Water Use Reduction 25%	1	WE Water Use Reduction 50%	6
WE Water Use Reduction 30%	2	MR Construction Waste Management 50%	1
WE Water Use Reduction 35%	3	MR Materials Reuse 30%	1
WE Water Use Reduction 40%	4	MR Materials Reuse 40%	2
WE Water Use Reduction 45%	5	EQ Low-Emitting Materials	Up to 3

INTERIOR DESIGN + CONSTRUCTION: COMMERCIAL INTERIORS V4, V4.1

WE Water Use Reduction 25%	2	MR Construction Waste Management: Diversion 50%	1
WE Water Use Reduction 30%	4	MR Construction Waste Management: Waste Prevention	Up to 2
WE Water Use Reduction 35%	6	MR Furniture + Furnishings Reuse 30%	1
WE Water Use Reduction 40%	8	MR 50% of Materials are reusable or recyclable	1
WE Water Use Reduction 45%	10		
WE Water Use Reduction 50%	12		

OPERATIONS + MAINTENANCE: EXISTING BUILDINGS V4, V4.1

WE Water Use Reduction 10%	1	WE Water Use Reduction 25%	4
WE Water Use Reduction 15%	2	WE Water Use Reduction 30%	5
WE Water Use Reduction 20%	3	Solid Waste Management	2



Let us help you design a space perfectly suited to you and your team

Building your dream clinic can be both exciting and scary. But you don't have to do it alone.



DESIGNING THE SPACE


See how your space will look when furnished with cabinetry and equipment. Three-dimensional renderings created in our Midmark Design Software enable you to adjust equipment, explore different styles and finishes, discuss workflow needs, and design a space that meets your needs—before construction begins.



BRINGING THE DREAM TO LIFE

Practice owners, Drs. Carrie Ellis and Kevin Rebrovich, worked closely with our clinical design team to plan and create their dream facility. Continue reading for more of their story—and see how we can help you do the same.

Real-life success story

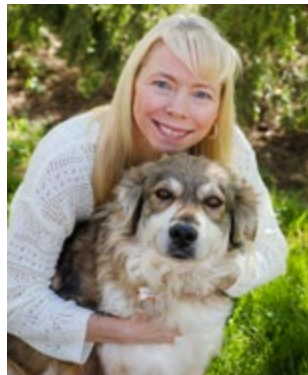

Carrie Ellis, DVM

Long before Whiskers and Paws Animal Hospital became a reality, Dr. Carrie Ellis and Dr. Kevin Rebrovich talked of becoming practice owners. Yet they had questions about designing the right facility for their needs. What would they need in a new space? How would it impact day-to-day care delivery?

Both doctors viewed cabinetry as a foundational decision impacting room layouts and workflow. In seeking cabinetry durable enough for the veterinary environment, they turned to Midmark where they soon realized that our clinical design expertise could help answer broader questions about designing for clinical care and efficiency.



Kevin Rebrovich, DVM

Engaging early with Midmark design experts helped Doctors Ellis and Rebrovich make better decisions about space design, equipment, storage and workflow.

Today, the Whiskers and Paws team is practicing in a beautiful new animal hospital that has fulfilled the dreams of Doctors Ellis and Rebrovich.



“The elevations Midmark provided, and seeing the spaces in three dimensions, made us feel much more comfortable with our design.”



Kevin Rebrovich, DVM
Veterinarian/Co-owner

Choose a style that complements your unique brand

Synthesis® Cabinetry includes many styling options including colors, finishes and other elements designed to put your unique signature on a space, whether one room or a network of facilities, for a consistent brand perception.



HANDLE STYLES



Styling options to create a custom look and feel

PANEL STYLES



[Visit the Synthesis® Cabinetry Colors and Style Guide](#)






















*EPA Registration Numbers 85353-2 and 087753-CT-001

**Cabinetry available in Pebble Grey or Pebble Grey PVC Free only. Renew handle insert color can be customized.

Distinguish your space with color

Color is an important part of designing a space and establishing a distinct brand. More than simple visual appeal, it can transform a space. The tones and textures you select will help create a welcoming environment for your patients and clients.

COLOR OPTIONS

	Dune 794
	Flax 795
	Nest 796
	Path 798
	Brazilwood 874
	Hewn 797
	Radiance 800
	Acorn 459
	Henna 803
	Sediment 799
	Earth 487
	Timber 801
	Storm 802
	Earthen Bronze 806
	Flat Iron 807
	Venus Silver 804
	Pearl Essence 805
	Fawn 490
	Whisper 649
	Pebble Grey 216 (PVC-Free-793)
	Frost 791

The color examples shown are the best representation of the original material. Actual color may vary slightly. We strongly recommend that you contact Midmark Customer Experience at 1.800.MIDMARK to request a sample before placing your order.

Finish your space with options from one source

Synthesis® Cabinetry provides you with a host of options and accessories to choose from—all designed to allow you to create a functional and stylish space.

SINKS + FAUCETS



Stainless



Solid Surface



Electric Eye



Wrist Blade


CABINET OPTIONS




Treatment Chase



Tapmaster® Faucet Control

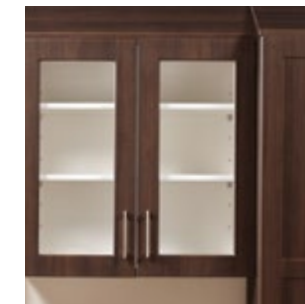

Plexi Doors

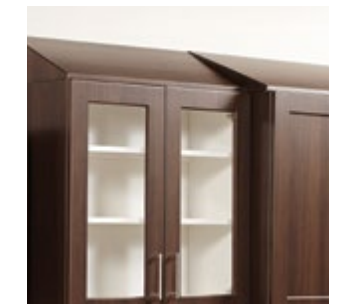

Sloping Tops



Treatment Tables



Procedure Carts




Digital Locks



Narcotics Cabinet


COUNTERTOPS

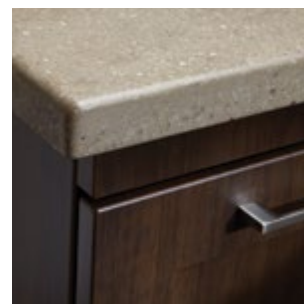


Solid Surface



Antimicrobial Solid Surface*

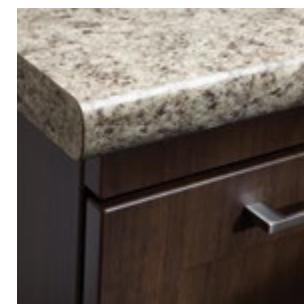


Laminate Post Form

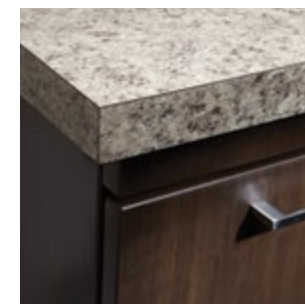

Laminate Self Edge

OTHER OPTIONS

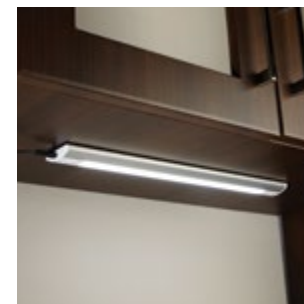

LED Task Lights



Drawer Organizers



Storage Accessories

*EPA registration number 84542-7



Designing better care.®



CARB 93129.2 Phase 2 Compliant and TSCA Title VI Compliant

The color examples shown are the best representation of the original material. Actual color may vary slightly. We strongly recommend that you contact Midmark Customer Experience at 1.800.MIDMARK to request a sample before placing your order.

No product can guarantee points. Points are cumulative for all effected materials for a LEED® project. For further information on LEED, please visit the USGBC website: usgbc.org
LEED is a registered trademark of the US Green Building Council.

Midmark is an ISO 13485 and ISO 9001 Certified Company. Certain products are not included. See the complete list at: midmark.com/ISO

For more information, contact your Midmark dealer or call: 1.800.MIDMARK

Outside the USA call: 1.937.526.3662 or visit our website: midmark.com

© 2022 Midmark Corporation, Miamisburg, Ohio USA
Products subject to improvement changes without notice. Litho in USA.

Nutsert is a registered trademark of Avdel UK Limited United Kingdom

Tapmaster is a registered trademark of Tapmaster Incorporated Canada

007-10416-00 Rev. A1 (2/22)

